

1. Check your system`s compatibility

☒ GOIGSQTEMFMPSSV4MIBGP6M1M75BIMCEFPICGRRIGMSRERH7IEQ36
 ☒ 8IQMRMQQVIMVIQIRSV166GETEFP14GERFISRHSR16SPIQEREGVIVFM1
 ☒ SV4MIGSQTEMFPI8PPSIVISIMRVGMSR


REPPEMSRS16SPI

1. Visit: <https://www.oculus.com/setup/> ⁽¹⁾
2. Download and install the appropriate Oculus software.
3. Open the Oculus App and follow the "New Hardware Setup" instructions.
4. Standing behind the ICAROS device, select its orientation as the focus area.
5. Complete the Oculus "Guardian Setup".
6. If you need help, visit: <https://support.oculus.com/1225089714318112/> ⁽²⁾
7. Select your VR goggles and watch the corresponding "Basics Tutorial".


Translated with www.DeepL.com/Translator (free version)



(1) Oculus App Setup

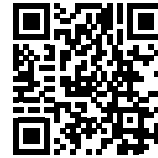


(2) Oculus Basics Tutorial

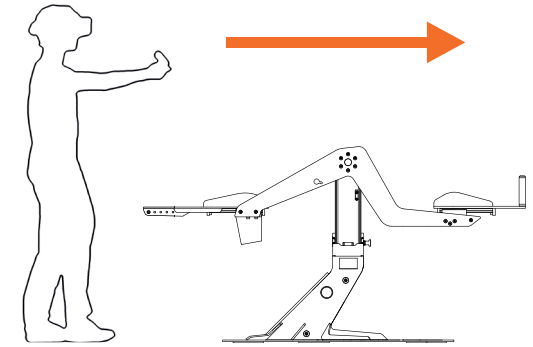

3. Synchronize the Oculus VR goggles with Steam VR


1. Place the Oculus VR goggle on the ICAROS device as depicted.
2. Visit: <https://store.steampowered.com/> ⁽³⁾
3. Download and install Steam, if not already done.
4. Sign in to your Steam account.
5. Visit: <https://store.steampowered.com/app/250820/SteamVR/> ⁽⁴⁾
6. Download and install Steam VR, if not allready done.

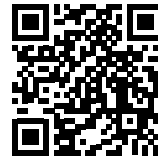

(3) Steam Store




(4) Steam VR

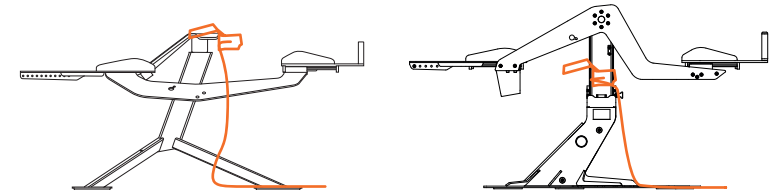


4. Steam VR room setup

1. Start Steam VR and open the „Settings Menu“ ⁽⁵⁾.
2. Select the „Developer“ ⁽⁶⁾ settings and look for the header „Room and Tracking“.
3. Select Room „Overview“ ⁽⁷⁾ and click „Quick Calibrate“ ⁽⁸⁾.

Now you can start your ICAROS Active VR Experience!

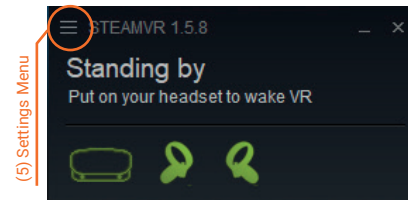

(5) Settings Menu

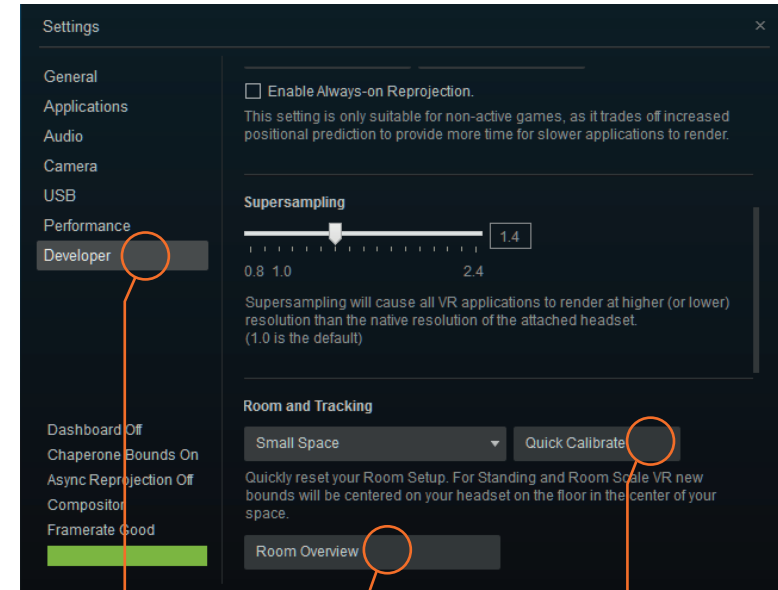

(6) Developer

(7) Room Overview

(8) Quick Calibrate



(9) ICAROS.com



(10) ICAROS Facebook

ICAROS Headquarters

Fraunhoferstr. 5
 82152 Martinsried, Germany
 +49 89 4141821 - 33
 info@icaros.com

www.icaros.com ⁽⁹⁾
www.facebook.com/icarosflight
⁽¹⁰⁾