



The ICAROS software and hardware is compatible with the following systems: HTC Vive, Oculus Rift, Oculus Go and Samsung Gear VR as well as Windows and Samsung Tablet. This guide describes how to set up the Oculus Rift for the ICAROS Pro, Home and R.

## You need:

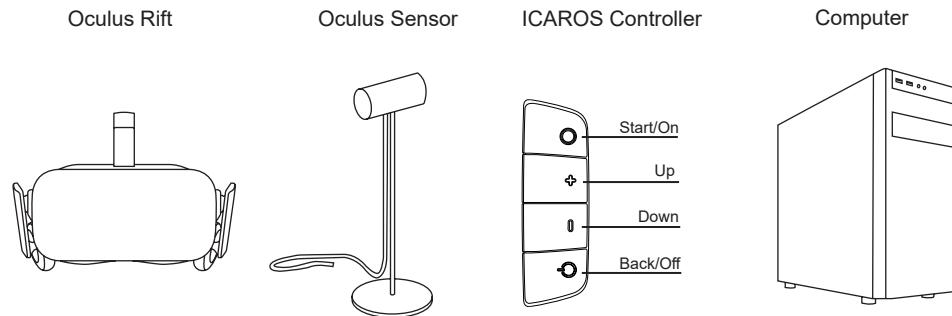


## 1. Placement

Place the Oculus sensor centered and approx. 13 ft. in front of the ICAROS device and aim the head of the sensor at the height of the handles of the ICAROS as shown. The sensor is connected to the computer via USB cable and the Oculus Rift Headset with a USB and an HDMI cable to the PC's graphic card.

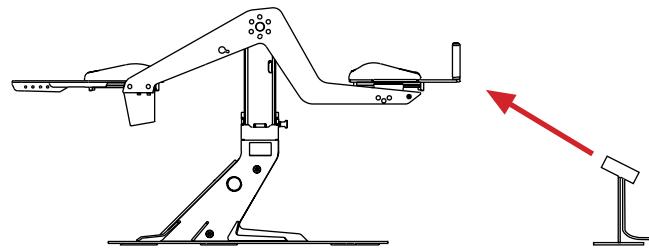


## 2. Installing Oculus software

Download the Oculus software at <https://www.oculus.com/rift/setup>. Install the software and create an Oculus Account. Log in to the software. When starting the program, a new Oculus Rift is automatically detected for calibration. Follow the instructions in the program to calibrate your Oculus Rift. During the calibration, place the Oculus Rift on the metal cover the ICAROS ring segment for height adjustment as shown (55cm). There is no Oculus controller needed to calibrate when playing ICAROS games. The error message of a missing controller can be ignored.

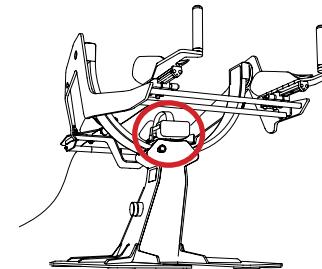

## 3. Installing Steam VR

Download the Steam software to your computer, install it and create an account. Steam VR will be automatically installed within Steam.

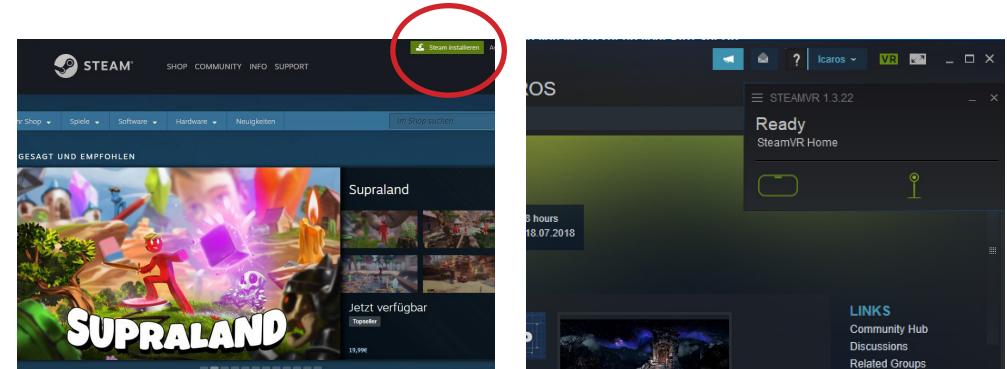

## 4. Installing ICAROS software

When you purchase an ICAROS game for the Oculus Rift, you will receive a zip file. The game is installed by opening this file.

## 5. Starting the game

Connect the ICAROS Controller via USB cable to the computer and turn it on by pressing the O button for 3 seconds. Start the ICAROS game. Steam VR and the Oculus software will start automatically. Follow the instructions in the game. Make sure the LED is flashing in green.

