

ICAROS

Pico



Instruction Manual

HOW TO LAUNCH ICAROS GAMES WITH PICO

Pico Buttons



BACK (to close the app)

CONFIRM (to confirm)

HOME

Press 1x to open the Home Menu (App will NOT be closed)
Press 2x to open the Pause Menu (App will NOT be closed)
Press for 1 second to reset orientation (calibrate view direction)



ON/OFF Button
2 seconds

Software Download

1. Download ICAROS Software for Pico with the download-link provided by ICAROS GmbH. www.icaros.com/en/experiences

Pico Start




2. Press the „ON“ Button for approx. 2 seconds.
In the menu, the language settings can first be made under ‚Settings‘.



3. Press „CONFIRM“ to skip the controller selection.
4. Press „CONFIRM“ again to accept the „Use headset“ mode.
5. Press „CONFIRM“ one more time to accept the safety agreement.

Game Installation

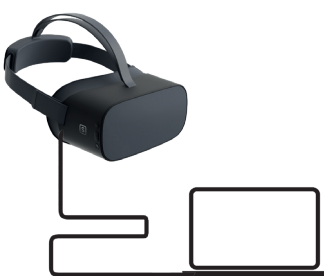


6. Connect Pico with the computer.
As long as the controller is not paired with the vr goggles, the menu navigation is guided by the viewing direction („Gazing“).



ICAROS.apk

7. Copy the APK file to any preferred folder on Pico.

8. Open the File Manager via „CONFIRM“ in main menu bar.

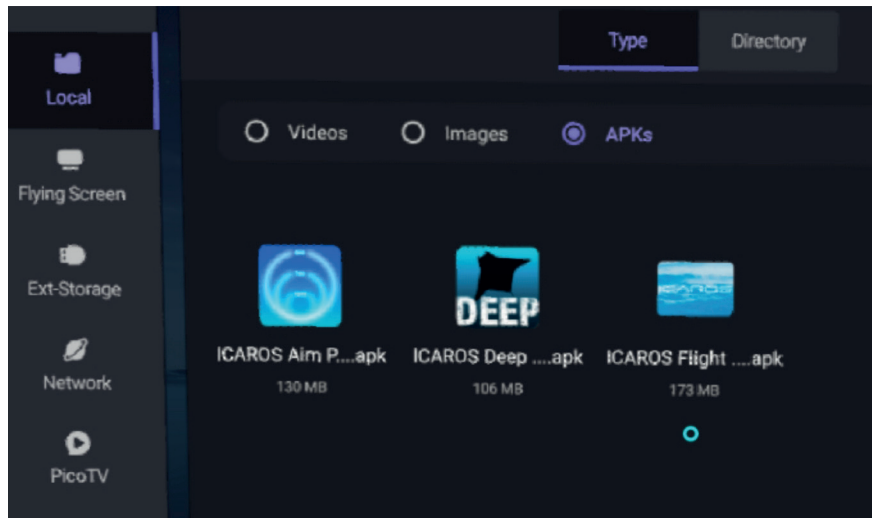

9. In File Manager open the APK you've copied to start installation

10. The games are now located under ‚Apps‘.

Game Selection



11. Gaze at the ICAROS game you want to play (in the menu on the right side) and start it with the „CONFIRM“ Button.
To calibrate view direction - press the Home button for 1 second.

A) Starting a Game with Pico G24K Controller



12.a Press „CONFIRM“ to accept the ICAROS Warning.



13.a Press the Home button to turn the Pico controller on.



14.a Get on the ICAROS device.

15.a Gaze at the ICAROS Experience in ‚Apps‘ and press „CONFIRM“ to select it.



16.a Insert the Pico Controller into the controller holder on the ICAROS device.



Make sure you are looking straight forward while orientation calibration via HOME Button or on the „Look Forward“ screen.

B) Starting a Game with ICAROS Controller



12.b Press „CONFIRM“ to accept the ICAROS Warning.



13.b Attach the ICAROS controller to the ICAROS device and press the top button for 2 seconds to turn the ICAROS controller on.



14.b Go to ‚Settings‘ - ‚Bluetooth‘ - Gaze at the ICAROS Controller and press „CONFIRM“ to select it.


15.b Get on the ICAROS device and select a game in ‚Apps‘



16.b Select with the controller the game mode you want to play.



Make sure you are looking straight forward while orientation calibration via HOME Button or on the „Look Forward“ screen.

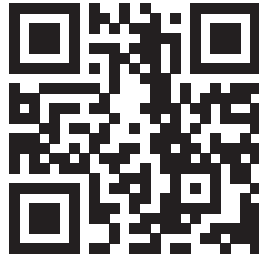

ICAROS HEADQUARTERS

Fraunhoferstr. 5
82152 Martinsried, Germany
+49 89 4141821 - 33
info@icaros.com

www.icaros.com
www.facebook.com/icarosflight